


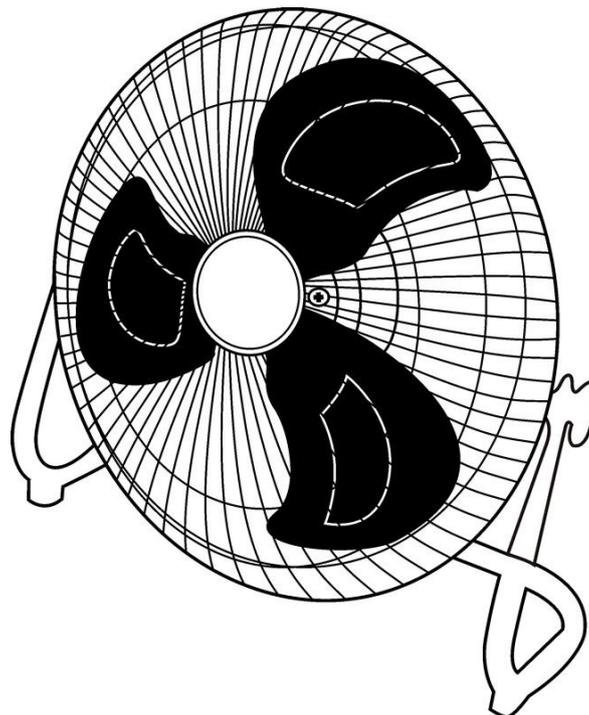

POWERFUL FLOOR FAN

Please read these instructions carefully before installing and operating the appliance.



Thank you for choosing our Powerful Floor Fan. This owner's manual will provide you with valuable information necessary for the proper care and maintenance of your new product. Please take a few moments to thoroughly read the instructions and familiarize yourself with all the operational aspects of the fan.

Technical Data and Electric Writing Diagram

MODEL	SIZE (Inch)	VOLTAGE (V)	FREQUENCY (Hz)	POWER (W)	SPEED (RPM)	AIRFLOW (M ³ /MIN)
500600	16	220	50	100	1320	88

Using Instructions

HOW TO ADJUST TILT

1. Insert knob to tilt nut.
2. Use knob to loose tilt nut by turning counter clockwise.
3. Adjust fan head to tilt you want.
4. Tighten the tilt nut by turning clockwise.
5. Keep knob for future use.

CLEANING

WARNING: Unplug from electrical supply source before cleaning.

- Use soft damp cloth to clean. Then wipe with dry cloth.
- Do not use a cleaning solution that is harmful to paints or plastics.
- Do not bend the blades.
- The motor bearings are permanently sealed and do not require additional lubrication.

CAUTION

If using an extension cord with this product, the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the product. Never use the plug with an extension cord unless of the plug can be fully inserted into the extension cord.

Important Safety Instructions

1. When using the appliance, you should notice the supply voltage must match the rating voltage shown on the label. (Allowing voltage deviates $\pm 5\%$)
2. Before the fan works, please check whether the fan blades and the cover grill are installed properly. Make sure the fan blade doesn't touch the grill, and the clips fix grill well.
3. Don't move the fan when it is on. You can move it when it is shut down and the fan blade stops revolving.
4. Do not use the appliance in explosive, dusty, and vaporous air.
5. Do not use appliance in places with temperature 40°C or higher.
6. This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for the safety.
7. Children should be supervised to ensure that they do not play with the appliance.
8. If the power cord is damaged, it must be replaced by the manufacturer or its service agent, or similar qualified persons, in order to avoid hazard.
9. To reduce the risk of electric shock, disconnect power before servicing.