

# User Manual

Thank you for purchasing our scale. With Normal care and proper treatment, it will provide years of reliable service. Please read all operating instructions carefully before use.

## SPECIFICATIONS

Units: g/oz/tl/ct(for300g---750g)  
g/kg/lb/oz (for1000g---10000g)  
Tare range : Tare full capacity  
Auto off (default): 60 seconds off  
Operation temperature: 5-35°C  
Display: LCD 6 digits

## OPERATION(ON/OFF)

1. Place Scale on a horizontal flat surface, press ON/OFF Switch
2. Wait until "0.0" is displayed
3. Put the object(s) on the weighing platform

## COUNTING FUNCTION(PCS):

1. Put the relevant amount of goods that you are going to count as the sample (25,50,75,100).
2. Press and hold "pcs" key for two seconds, then you will see "100".
3. Press "MOOD" key and you will see "25,50,75,100". Please select the number that you are willing to put as the sample number. Then press "PCS" key to confirm it.
4. Now you can put the goods that you want to count on the center of the platform and the LCD will show the actual number of the goods on the platform.

## MODE

According to various needs of the model unit, press the key of "mode" you can choose the unit of g/kg/lb/oz.

## TARE WEIGHING

1. Turn on scale as described above
2. Place the "tare item" on the platform
3. Press "TARE" and wait until "0.0" (or "0") is displayed
4. Add the "net -weight-item"

## LIGHT

Turn the scale on, press the key of "light" you can choose the backlight.

## CALIBRATION

This scale had been calibrated before it was dispatched from the factory. But at times when there is a remarkable change in temperature or humidity (including change of seasons), there might be inaccuracies. please recalibrate the scale according to as follows:  
In weighting mode, keep the scale tray empty, press MODE button and hold on, it will display "CAL", then release, press MODE buttons again, the LCD will display "CAL" followed by the required calibration weight, place the required weight, it will show "PASS" and return to normal weighting mode, the calibration is finished.

△ To calibrate, use a standard weight in same weight as full capacity.

- ★ Avoiding any exposure to extreme heat or cold, your scale works better when operated at normal room temperature. Always allow the scale to acclimate to normal room temperature for at least one hour before use.
- ★ Keep your scale in a clean environment. Dust, dirt, moisture, vibration, air currents and a close distance to other electronic equipment can all cause an adverse effect on the reliability and accuracy of your scale.
- ★ Handle with care. Gently apply all items to be weighed onto tray top. Although this scale is designed to be quite durable, try to avoid rough treatment as this may permanently damage the internal sensor.
- ★ Avoid shaking, dropping or otherwise shocking the scale. This is a precision instrument and must be handled with extreme care.